


WM W/ TRAPEZE AND DIVIDER

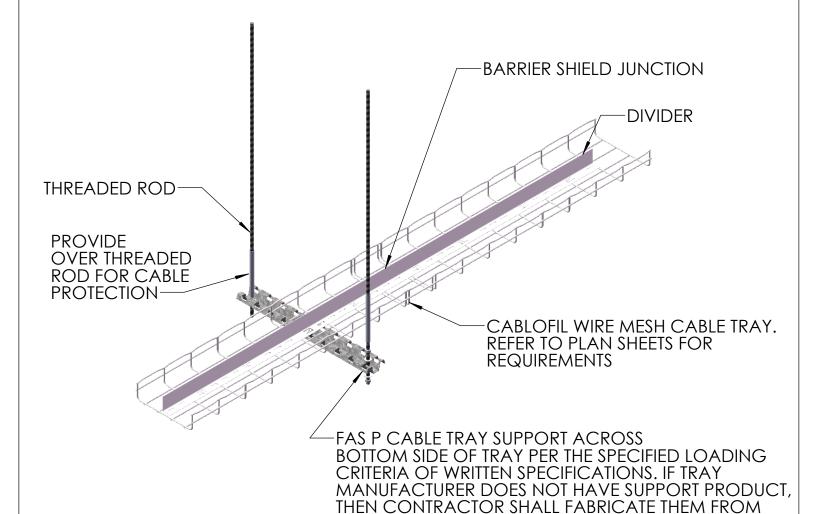

'FAS P', ALL THREAD RODS (ATR) ETC...

NOTES:

- 1. CF54 & CF105 DEPTH TRAYS: ATTACH TO TRAY WITH FOLD-OVER TABS OR WITH EZBN1/4 & CE25.
- 2. CF150 DEPTH TRAYS REQUIRE EZBN1/4 & CE25 TO SECURE BARRIER TO TRAY

"Copyright LNA, Inc. Drawings are proprietary and may not be copied or otherwise duplicated

or used without express written permission.'

8319 State Rt 4 Mascoutah, IL 62258 USA 800-658-4641 618-566-3250 Fax618-566-4978 www.legrand.us/cablofil